


Novel



Installation instructions

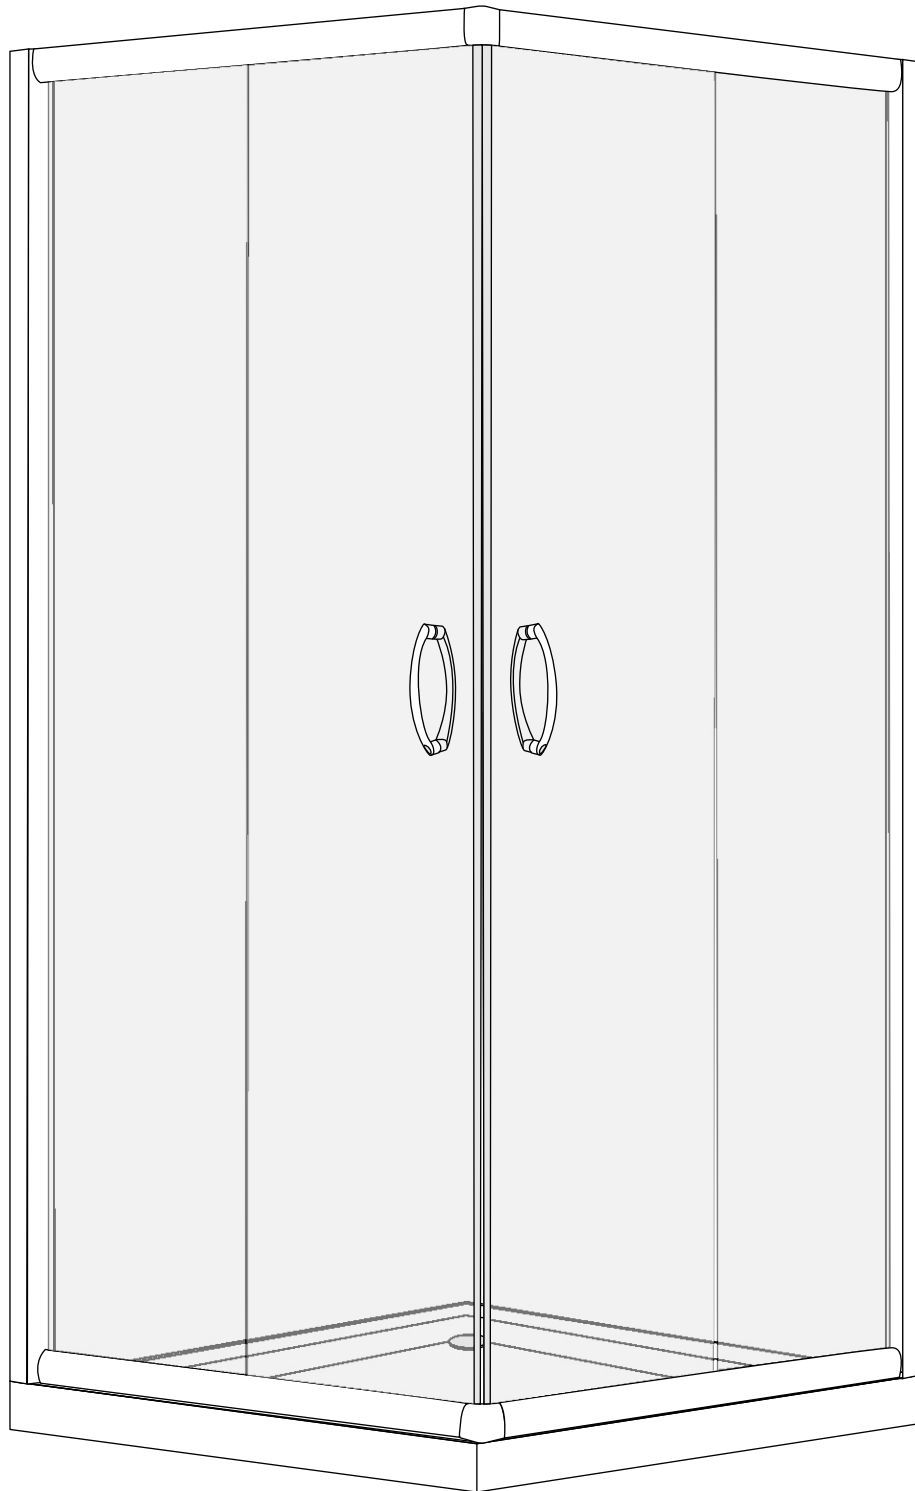


SIZE: 80*80*205CM
SIZE: 90*90*205CM

Novel


Installation instructions

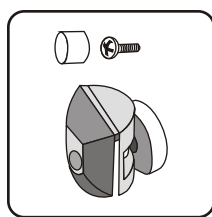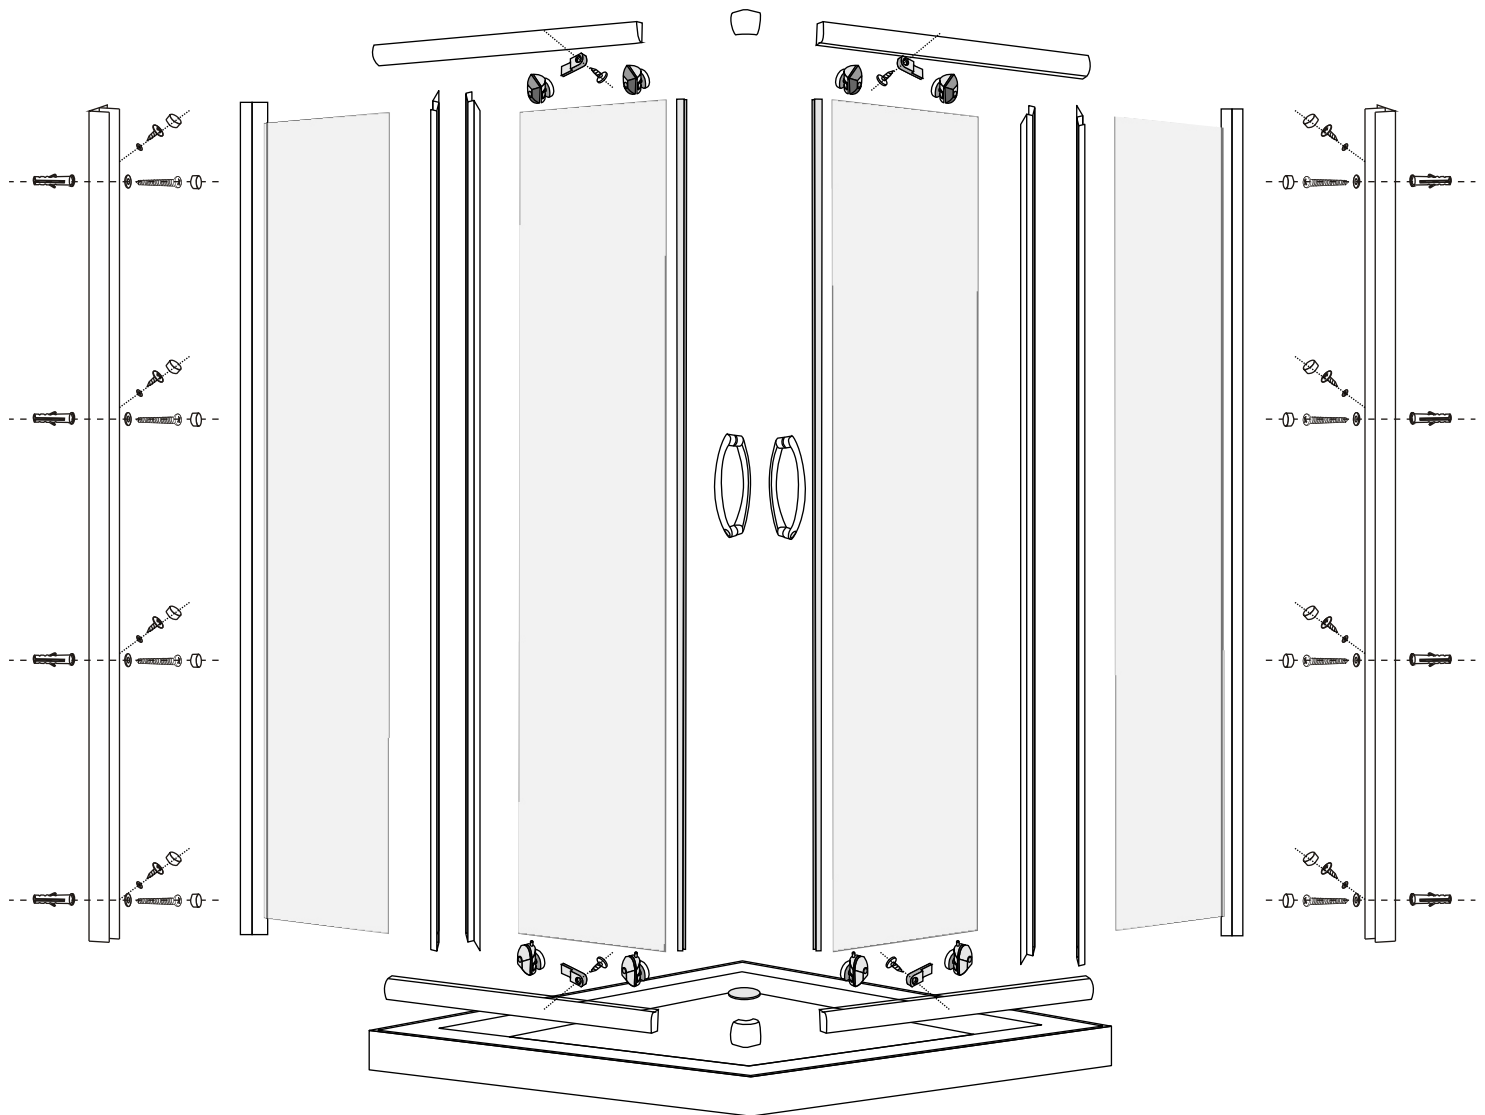


4PCS

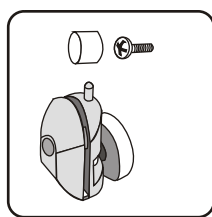


4PCS

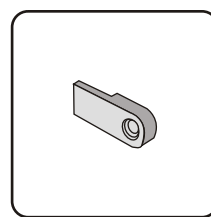


4PCS

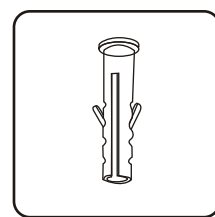


8PCS

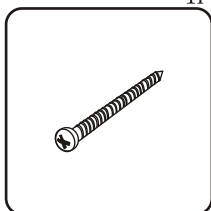


4x45mm
8PCS

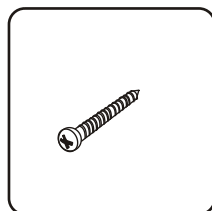


4x25mm
8PCS

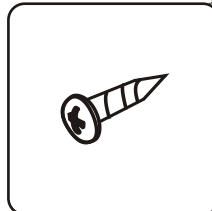


4x10mm
8PCS

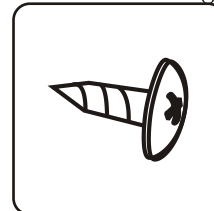


4x10mm big flat head
8PCS

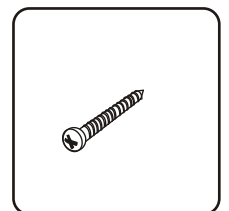


4x20mm
4PCS

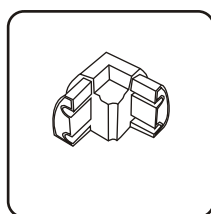


2PCS

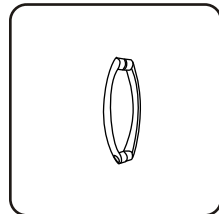

2PCS

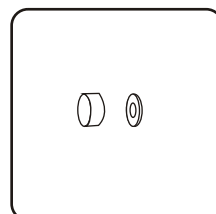

16PCS

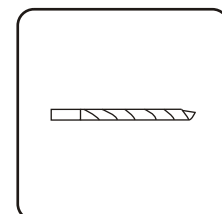


Ø 3mm
1PCS

Novel Installation instructions

TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start,make sure that you have the following tools to hand,plenty of space and a clean dry area for assembly.


Two people are needed. Please note:although these instructions are comprehensive,We always recommend that a technically competent installer should undertake installation.

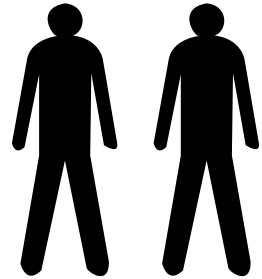



**Drill beat head
5. 5mm**




Sanitary Silicone

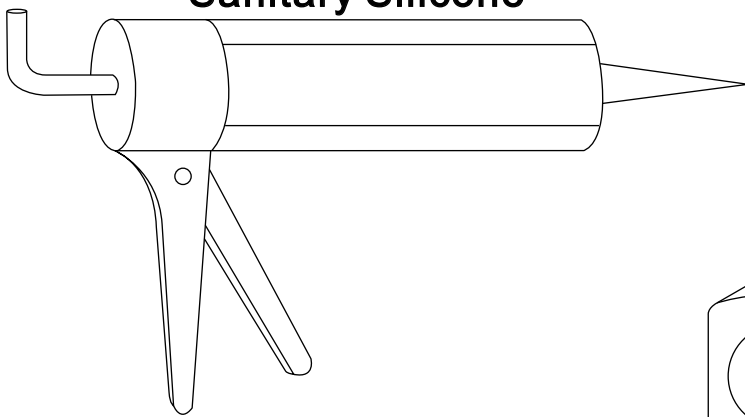


Power Drill

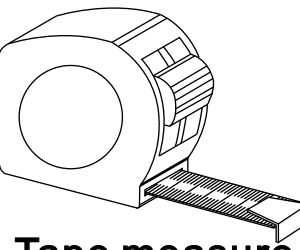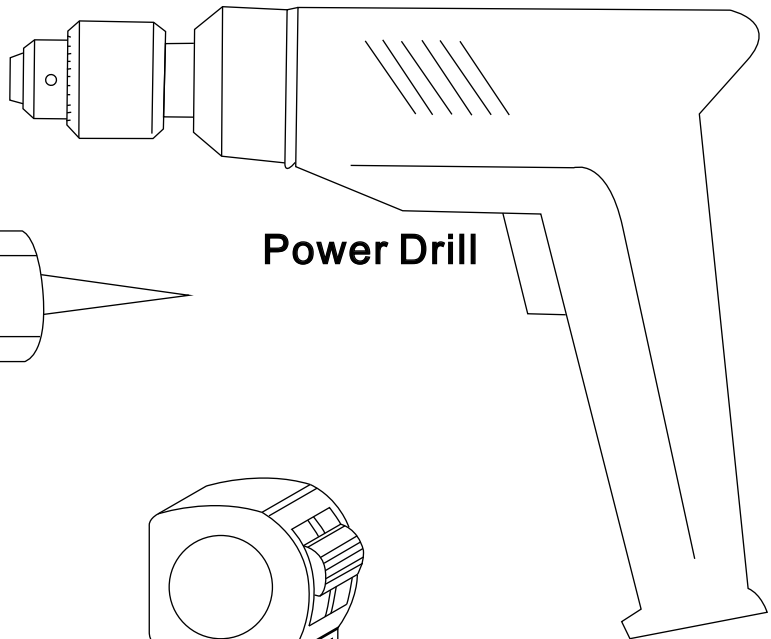


Tape measure

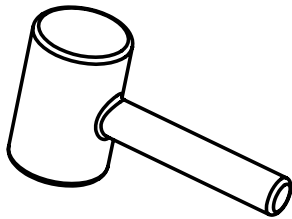


Rubber Mallet



Pencil




Magnetic crosshead schrewdriver

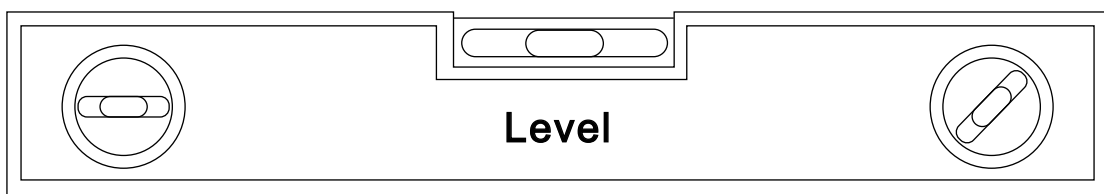


Level

Novel Installation instructions

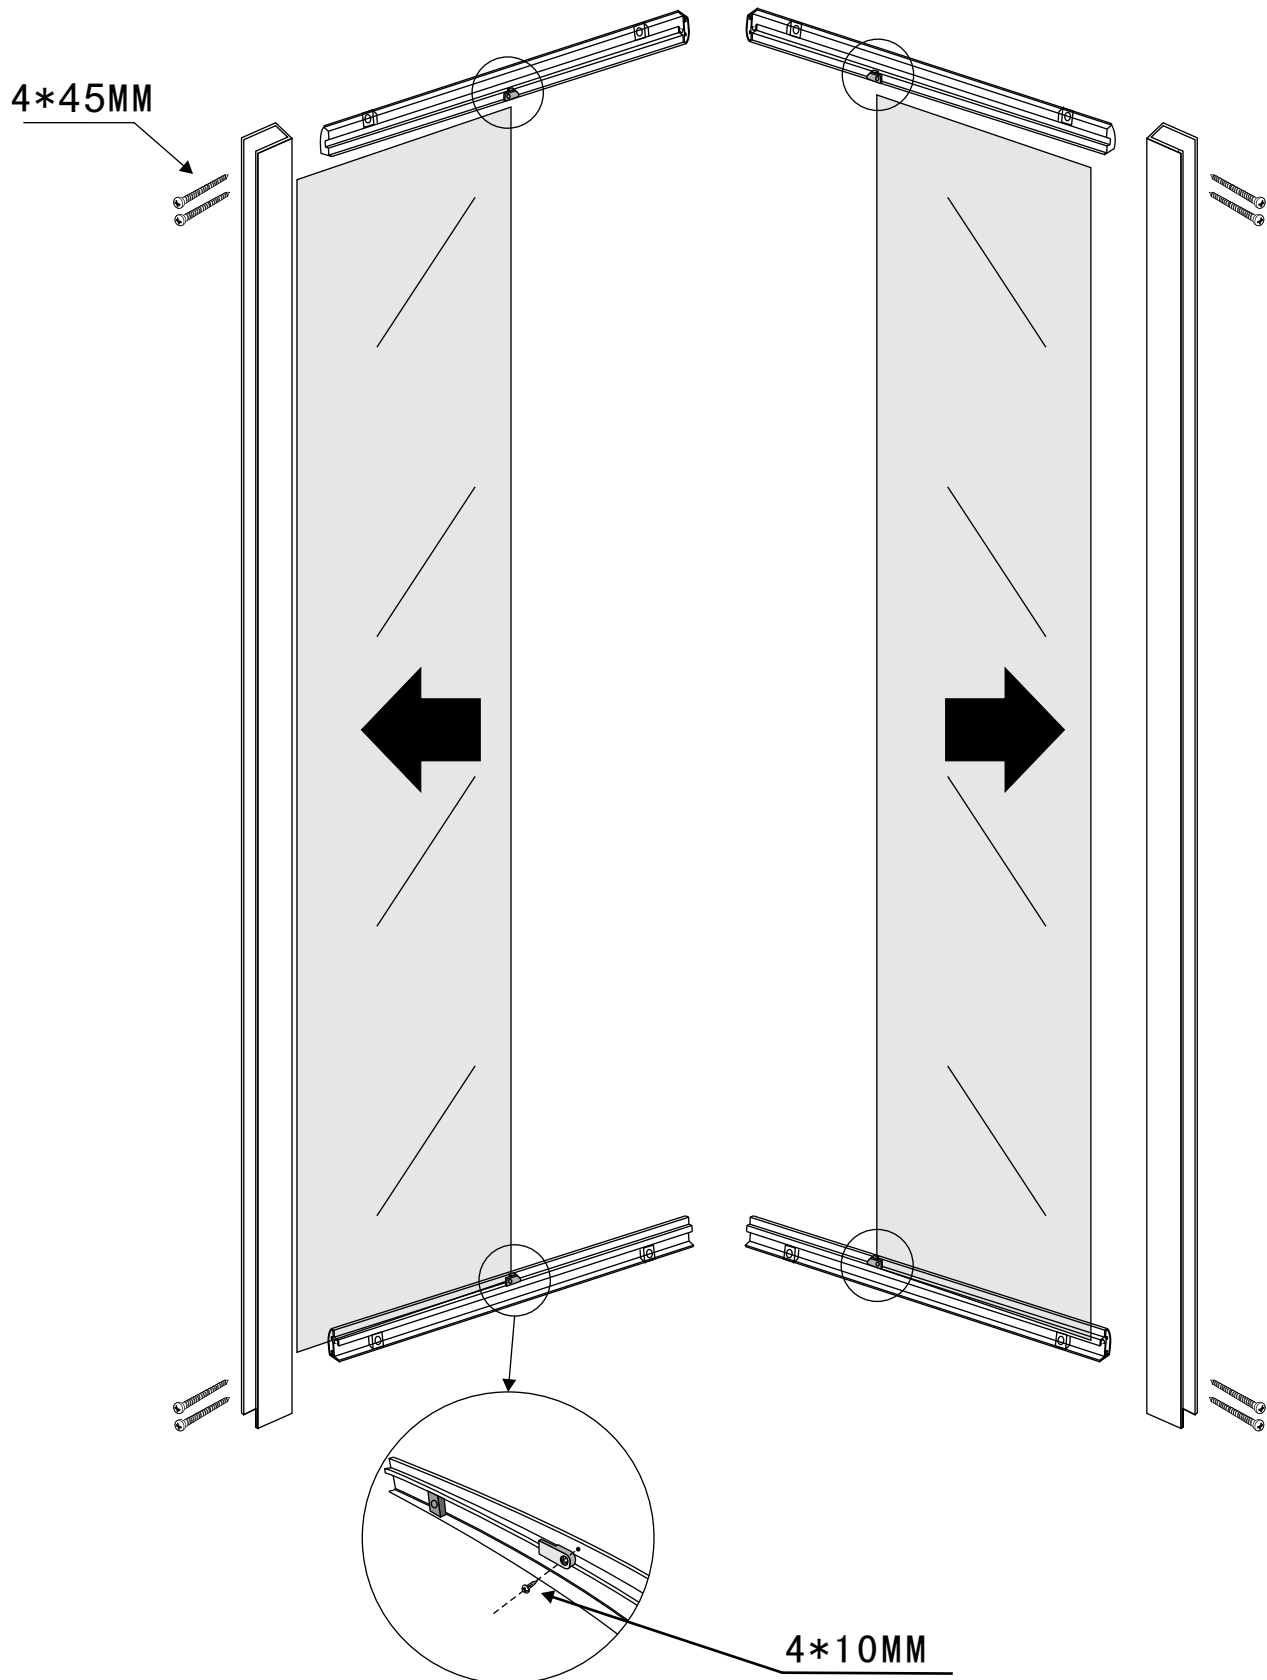


Novel Installation instructions


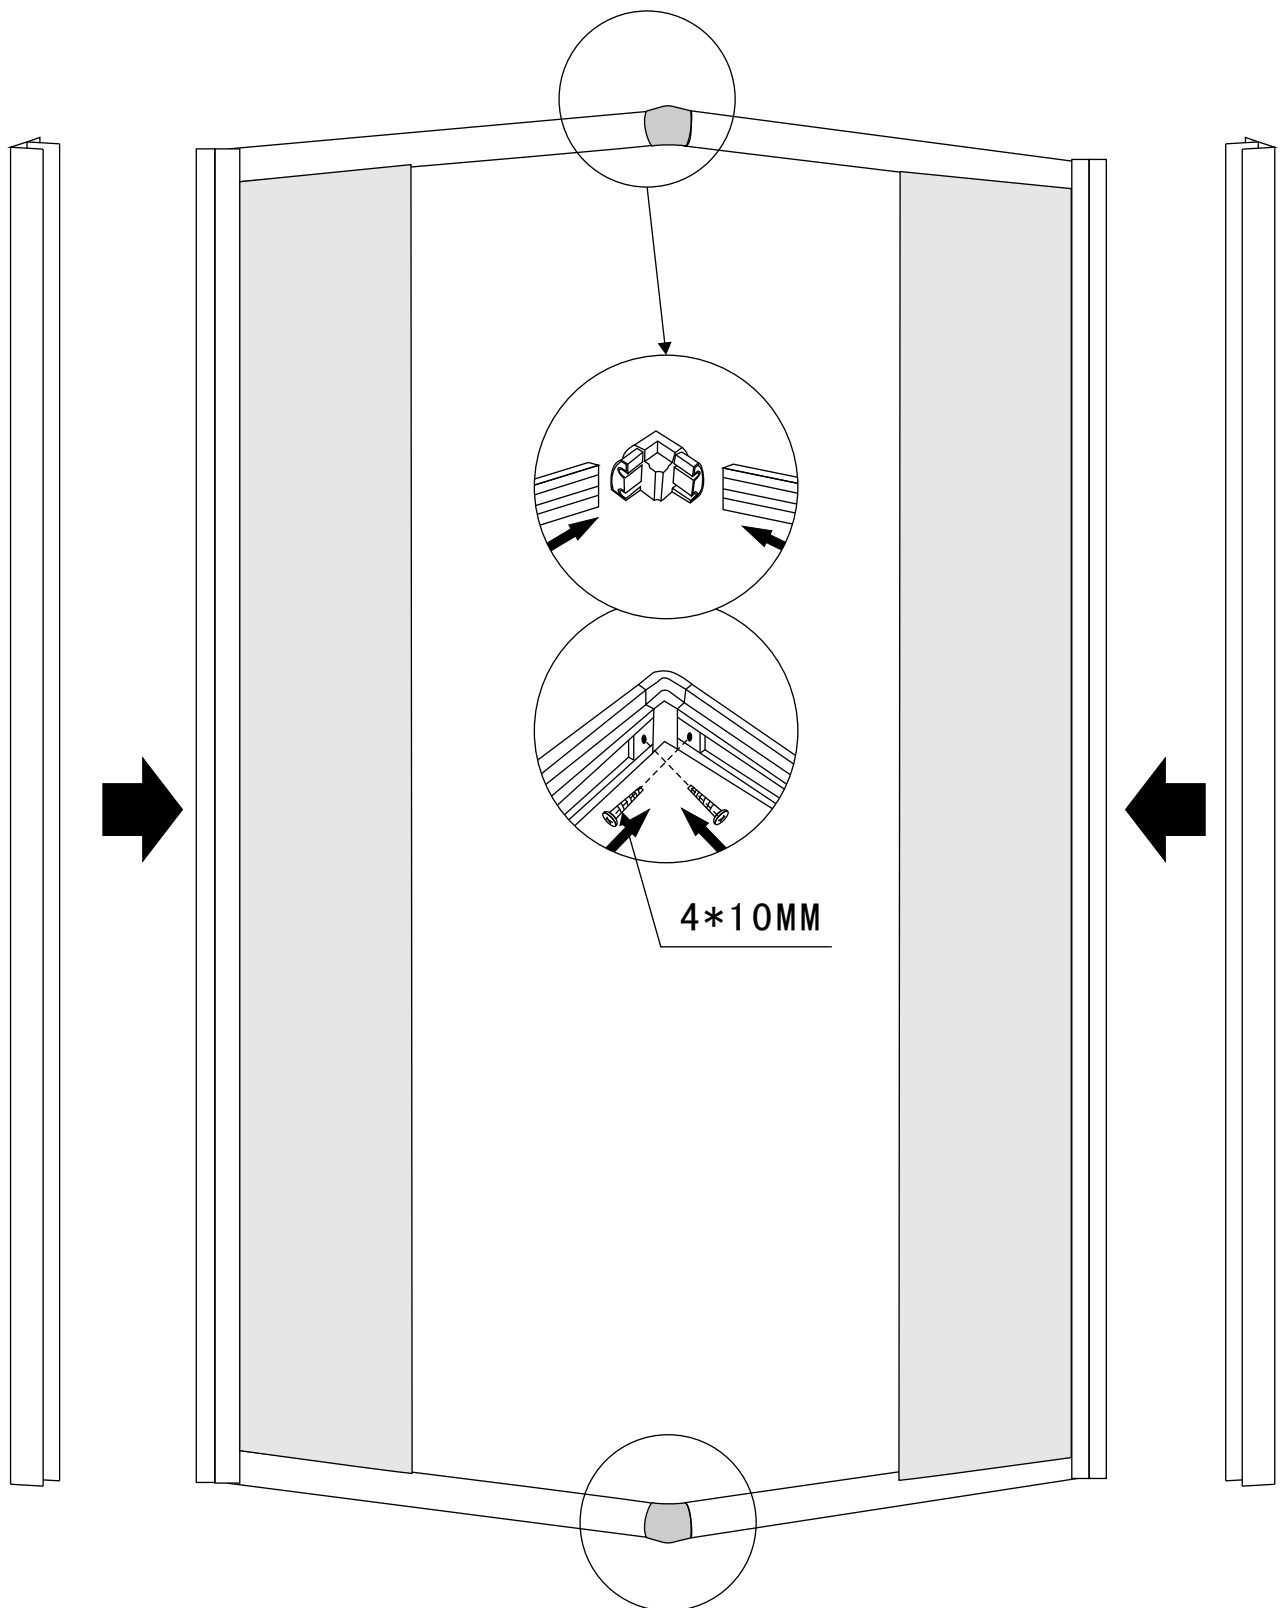


Novel

Installation instructions







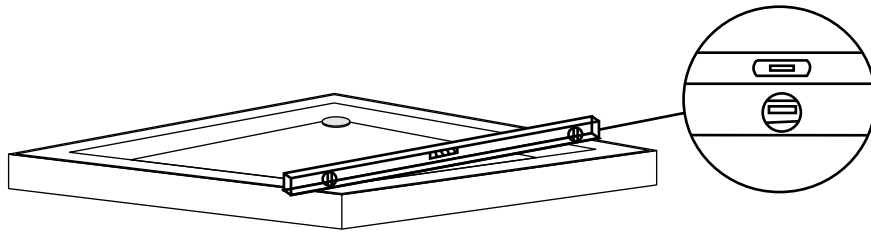


Lift the rear part of bottom basin, and then insert one end of the pipe into the drainage hole

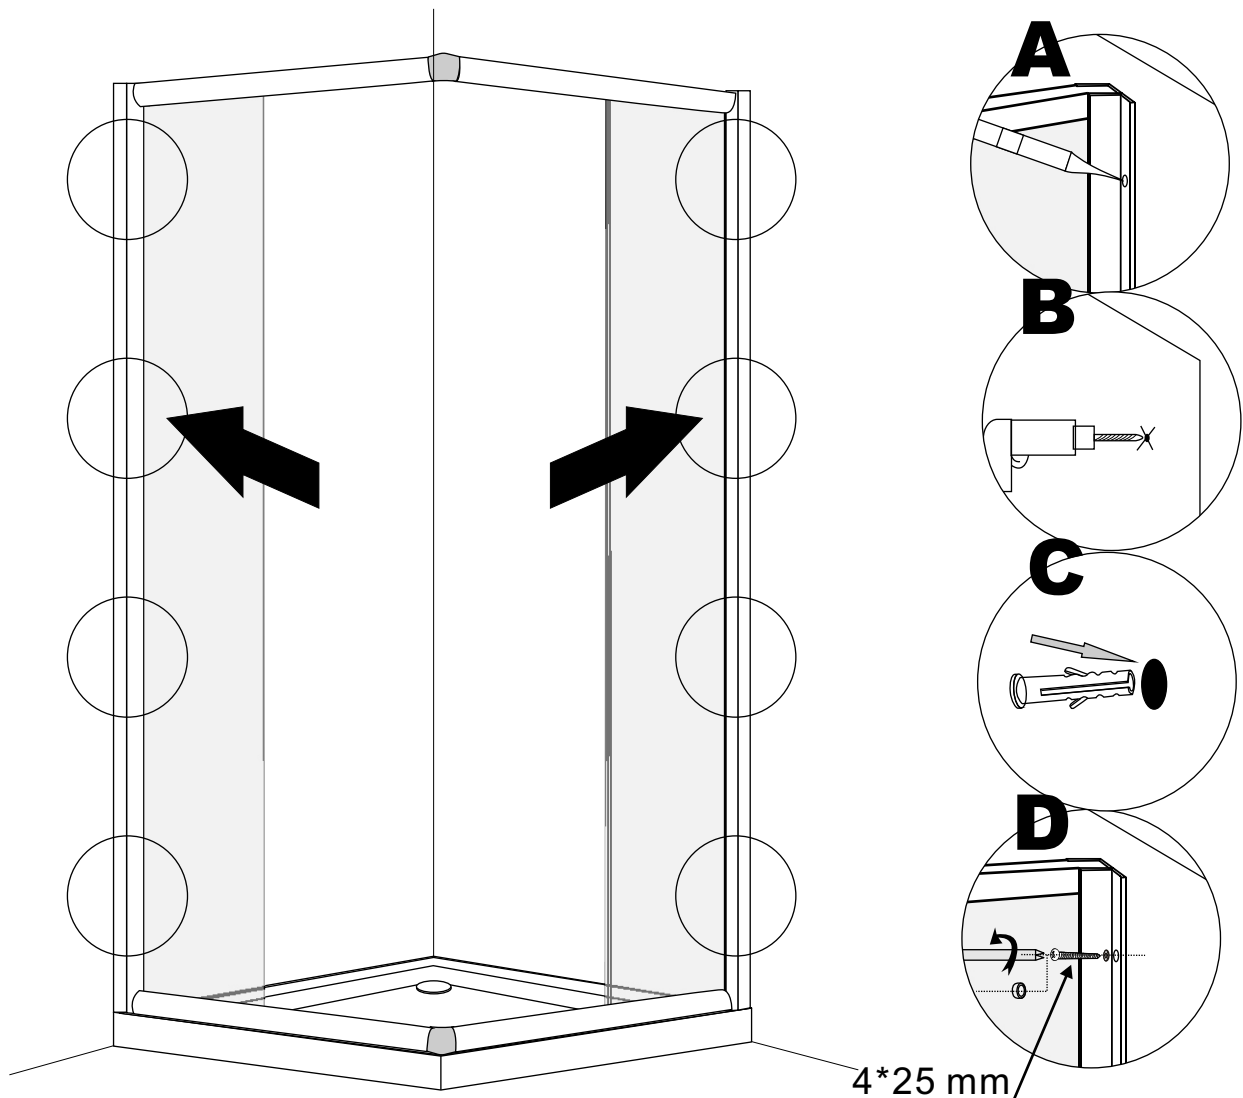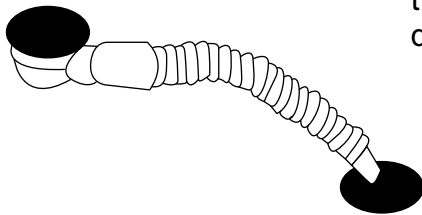





Novel

Installation instructions

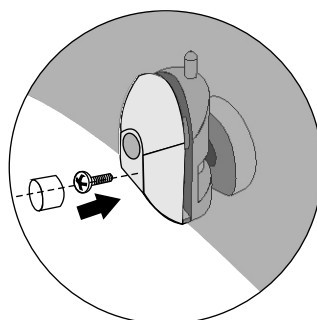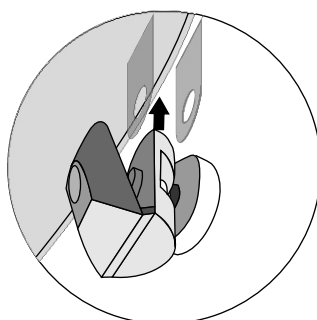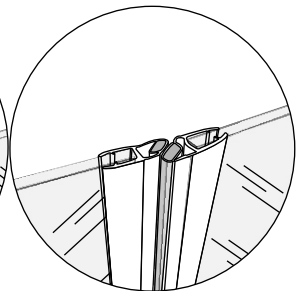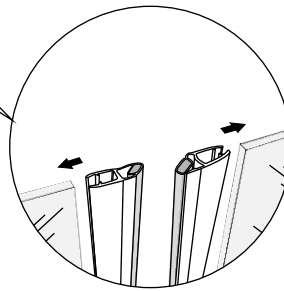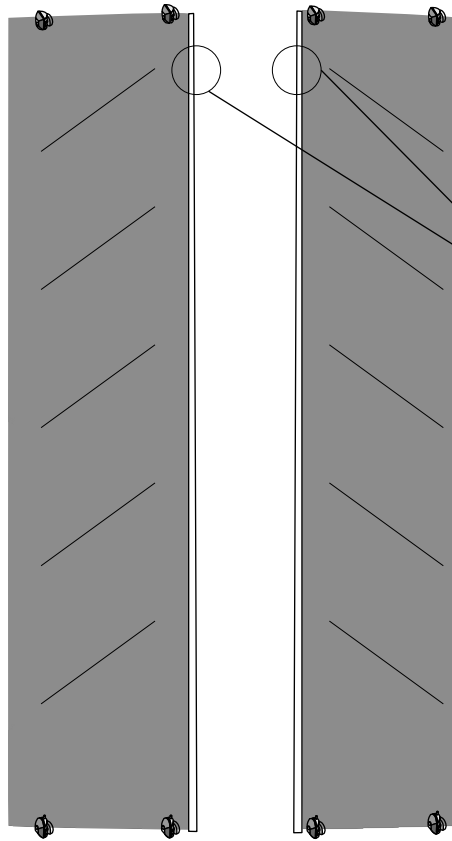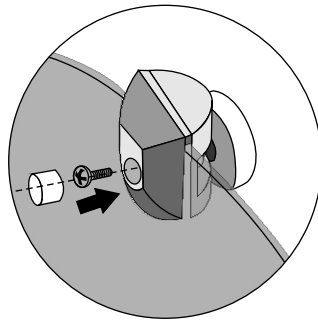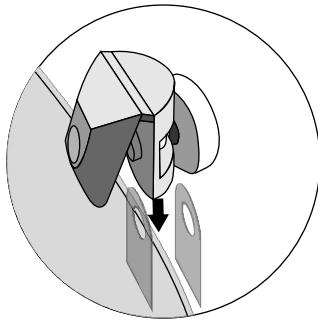


Novel

Installation instructions

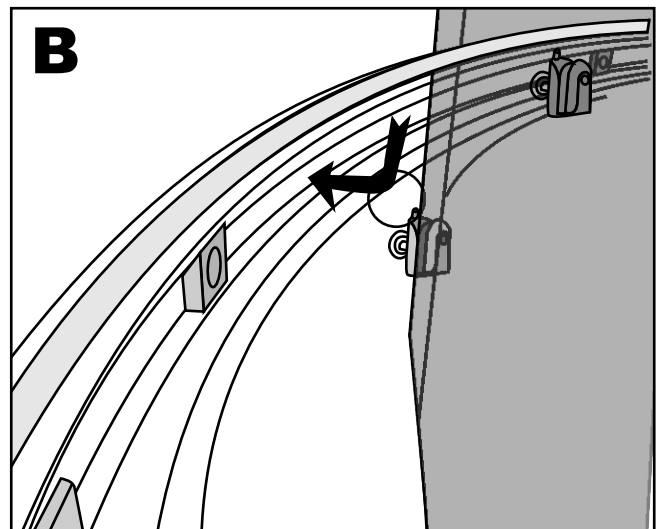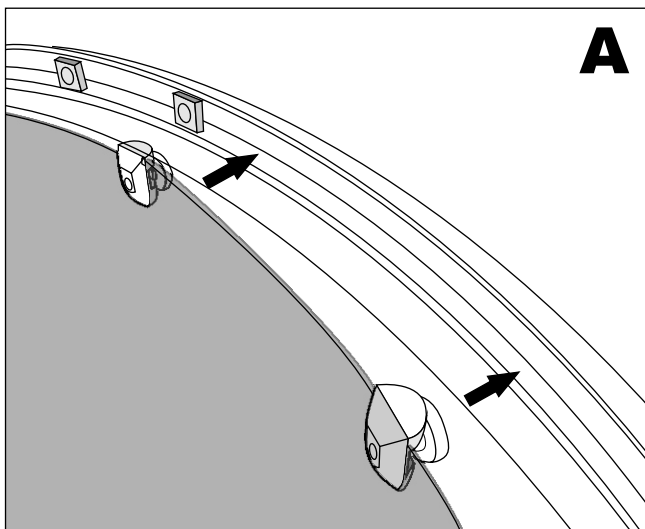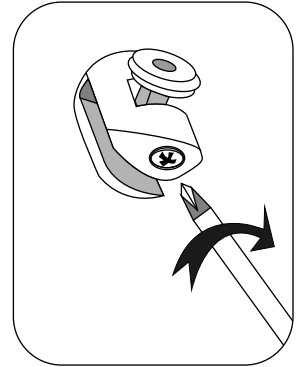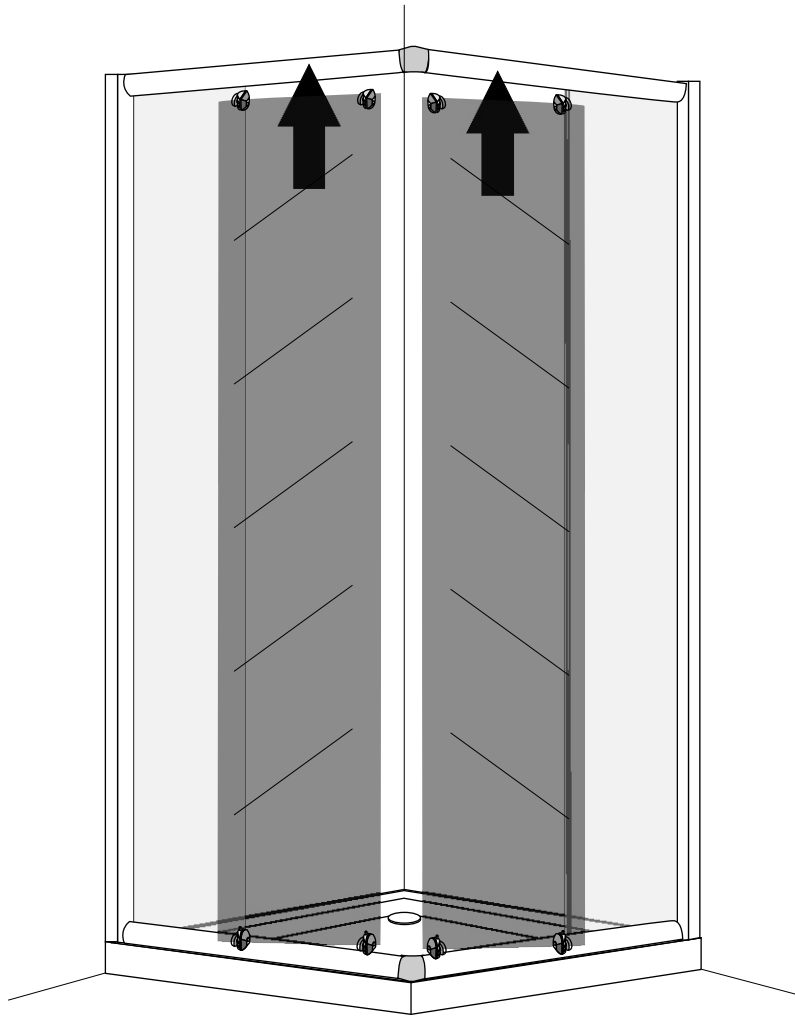


Novel Installation instructions

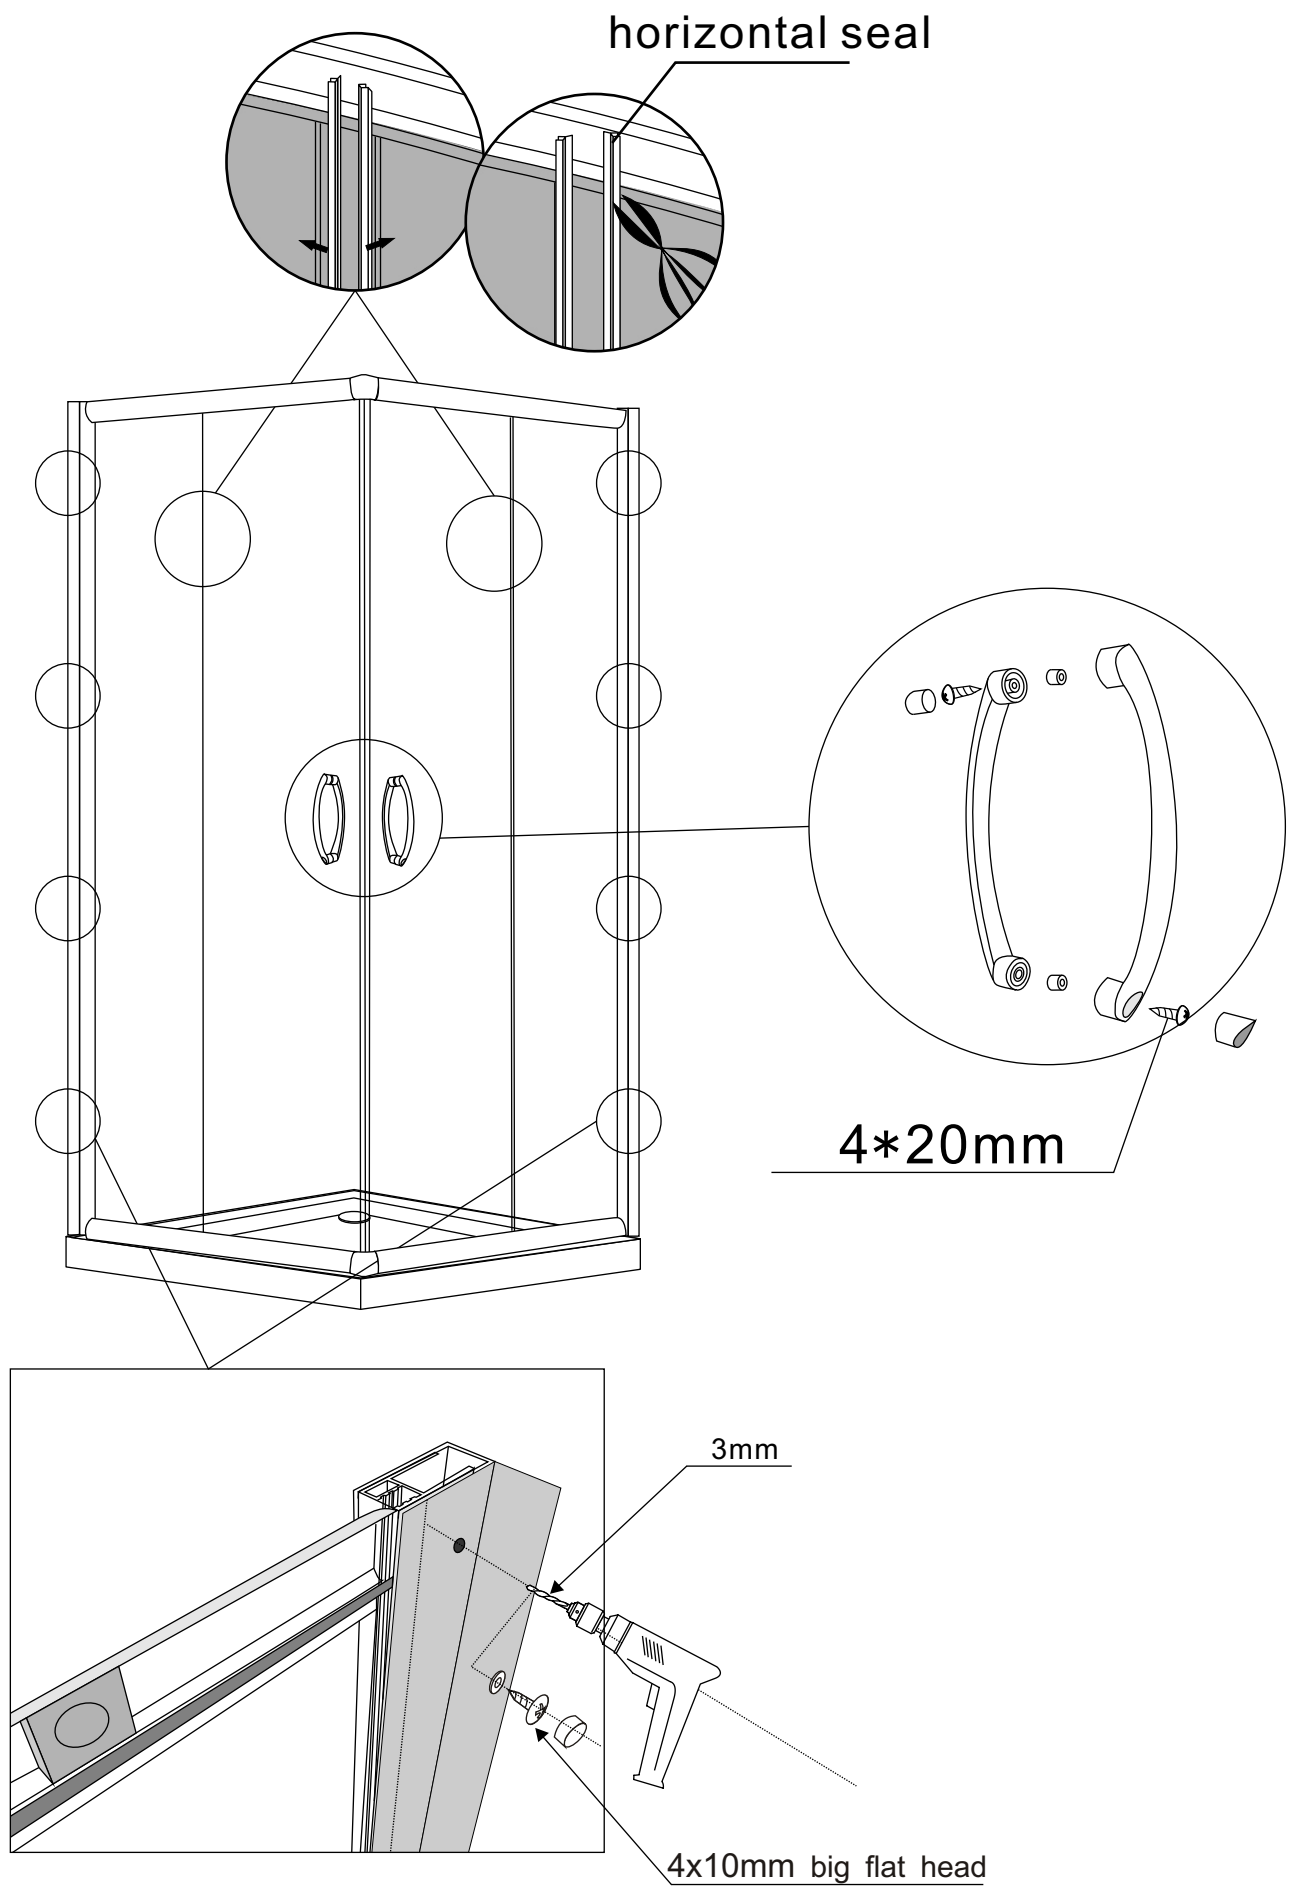

Novel

Installation instructions

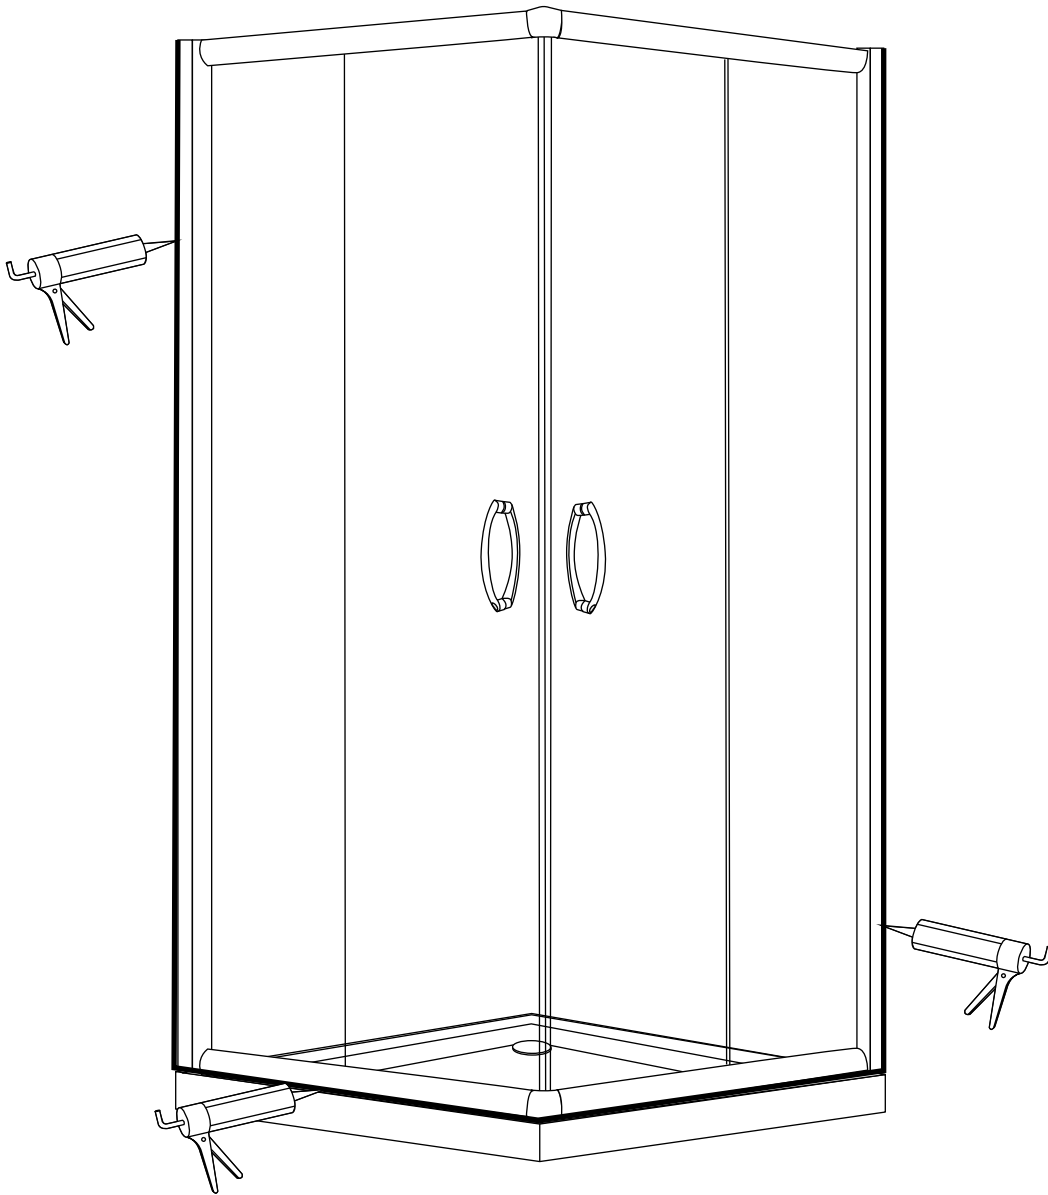

Warning: Don't use the shower enclosure until after at least 24 hours, so that the silica gel can be totally dry.